

## PS07 SMS COMMANDS

NO.	Command Name	Format	Reply
1	Location Check	123# or DW#	Current Location:DateTime: 2021-07-08 14:37:05 ,http://maps.google.com/maps?q=N31.384119,E121.425146
2	Status Check	STATUS#	Charging;GPRS:Link Up;GSM Signal Level:middle;GPS:UNFIXED;ACC:OFF;Defense:OFF;
3	Version Check	VERSION#	GS07_V01_2020.06.18
4	Parameter Check	PARAM#	IMEI:866551036526965;IMSI:0460048515509233;TIMER:10,10;SENDS:3;SOS:15618776551,;;CENTER;;Sensorset:10,2,3,1;Defense time:10;TimeZone:E,8,0;
5	Lat. &Long. Check	WHERE#	Current position!Lat:N31.361507,Lon:E121.409412,Course:57,Speed:43,DateTime:2020 - 07-31 07:49:04
6	Server setting:Domain setting (the last "0" stands for: TCP)	SERVER,1,DOMAIN,PORT,0#	OK
7	Server setting:IP setting (the last "0" stands for: TCP)	SERVER,0,IP,PORT,0#	OK
8	Server check	SERVER#	server,1,WW9016.GPSOG.COM,9016,0#
9	Device Reboot	RESET#	The terminal will restart after 1 minute!
10	Add SOS Number(With the area code)	SOS,A,Number1,Number2,Number3#	OKISOS1:8617717390235 SOS2:86... SOS3:86...
11	Delete SOS Number(With the area code)	SOS,D,Number1,Number2,Number3#	OKISOS number is empty!
12	Check SOS Number	SOS#	SOS number:17717390235,;
13	Time Intervals of Heartbeat Setting(T1=5-60s; Time Intervals of Upload When ACC is ON. T2=5-60s; Time Intervals of Upload When ACC is OFF)	TIMER,T1,T2#	OK
14	Query Time Intervals Checking for GPS Data Scheduled Sending	TIMER#	Timer:5,5;
15	Time Intervals of Heartbeat Setting(T1=1-5min, ACC ON Time Intervals of Heartbeat Upload T2=1-5min, ACC OFF Time Intervals of Heartbeat Upload)	HBT,T1,T2#	OK
16	Query Time Intervals Checking for GPS Data Scheduled Sending	HBT#	HBT:3,5;
17	Delay Defense setting(A:1-60 min,set delay defense time)	DEFENSE,A#	OK
18	Query delay defense setting	DEFENSE#	DEFENSE:20;
19	SENSOR CONTROL GPS(A=0-300 minutes 0 stands for GPS always on)	SENDS,A#	OK
20	Query SENSOR Control GPS	SENDS#	Sends:5;
21	Relay setting( A=0/1: 0 power on,1 power off)	RELAY,A#	Already in the state of fuel supply to resume,the command is not running!
22	Query relay setting	RELAY#	RELAY:RESUME;
23	Vibration Alarm setting(M=0-2: Alarm method,0 only Platf. 1 SMS+GPRS, 2 GPRS+SMS+CALL ; )	SENALM,ON,M#	OK
24	Turn off vibration alarm	SENALM,OFF#	OK
25	Query vibration setting	SENALM#	SENALM: OFF, 2
26	Power off alarm setting( M=0-2: 0 GPRS, 1 SMS +GPRS, 2 GPRS+SMS+CALL T1=2-60 s; Power off time T2=1-300s ; )	POWERALM,ON,M,T1,T2,#	OK
27	Turn off power off alarm	POWERALM,OFF#	OK
28	Query power off alarm	POWERALM#	POWERALM:OFF;
29	Low battery alarm setting(M=0-1 0 GPRS, 1 SMS+GPRS. )	BATALM,ON,M#	OK
30	Turn off low battery alarm	BATALM,OFF#	OK
31	Query low battery alarm	BATALM#	BATALM: ON, 1
32	Over Speed Alarm(B=5-600 S; C=1-255km/h; M=0-1; Alarm methods, 0 GPRS, 1 SMS+GPRS; )	SPEED,ON,B,C,M#	OK
33	Turn off overspeed alarm	SPEED,OFF#	OK
34	Query over speed alarm	SPEED#	SPEED: ON, 5, 120, 1
35	APN Setting(APN, APN name#)	APN, CMMTM#	OK
36	Temperature Inquiry	TEMPER#	temperature:22.0
37	Time zone adaptation(X=ON/OFF : ON:Turn on time zone adaptation,OFF : Turn off time zone adaptation)	ASETGMT,X#	OK, The terminal will restart after 30 seconds!
38	Query time zone adaptive parameters	ASETGMT#	ASETGMT:ON; Currently Timezone(GMT):E,8,0;