







3.1 Terminal Description

Status	Meaning
Red	Positive(9-90v)
Black	Negatitive
Orange	Acc line
Yellow	Relay

3.2 Red LED light (Power Supply Status)

Status	Meaning	
Slow Blink	Normal(Internal battery supply)	
Long Bright	Normal(Internal battery supply	
Off	Broken or Sleeping	


3.3 Yellow LED light (GSM Status)

Status	Meaning	
Quick Blink	Searching GSM Signal	
Slow Blink	Normal Working	
Off	GSM Searching Failed or Sleeping	

3.4 Blue LED light (GPS Status)


Status	Meaning	
Quick Blink	Searching GPS Signal	
Slow Blink	Normal Working	
Off	GPS Searching Failed or Sleep	




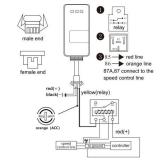

- 1 Red line connect battery positive pole(+) black line connect battery negative pole(-).
- ② Orange line connect ACC line.
- 3 Wring for Cut-off oil function:
- Find the 'Speed control line'.
 Detect the voltage of 'Speed control line' by a millimeter.
- Cut the 'Speed control line' into two lines.
 Connect "Speed control lines" with relay's two green lines.

- Note:
 1. Please use correct relay, normally, car suit 12V relay, truck suit for 24V relay.
- 2. Open SIM card cover, insert SIM card and turn on battery supply.
- 3. SIM card must have GPRS data and SMS service.
- 4. Please make sure LED lights up and no steel matter covering the device.
- 5. Please fix it by cable ties or tape.

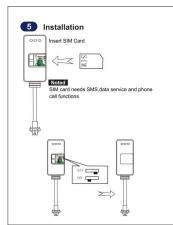

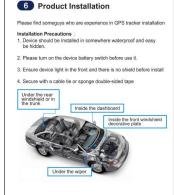

7 Precautions

GPS Tracker should be installed covertly, please contact the supplier for professional installation advice.

- Hidden installation, avoid water.
- 2. Ensure the Led side facing sky and no metal cover.
- 3. Use cable or 3m tape to fix the device.

8 Working Description

- After connected with vehicle battery, device will be turned on automatically and power indicator light (red) will be long bright.
- If the device is using its own back up battery, the power indicator light (red) will slowly blink after turned on manually.
- SGSM signal light (yellow) and GPS signal light(blue) start fast
- A few seconds later both GSM light and GPS light will be steady and start slow blinking; device enters into normal working status.

9 Trouble Shooting

	Problem	Description	Solution
		SIM card not installed	Check the sim card
	Falled to connect the internet	Simcard not installed properly	Install again
		No GSM network	Move the device in gsm network area
		Weak GSM network	Move the device in strong GSM network area
	Location	SIM card has no gprs functions	Contact Sim card supplier to activate the gprs function
	failed	Always reply "failed to get location"	Contact the supplier
	No GPS location	Some poor signal areas like basement, tunnels are not able to acquire GPS signals	Move the device to open sky areas.

10 Access to Platform

Platform(www.wanwaygps.com)
 Android and IOS APP(Scan the qr code to download app)



There are two methods to login in the platform or app.

1. Login by IMEI number(the 15 digits in the back of the device), password: the last 6 digits of imei number.

2. Contact the supplier to create an account for you.