 



GPS TRACKER USER MANUAL

PT06



Please read the installation instruction manual carefully before installation and use.

 1 Appearance

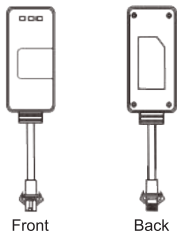

2 Product Features



ACC detection



Geo-safe



Low battery



Cut-wire Alarm



Trace Playback



Tracking



Geo-defense



Over-speed alarm



Displacement alarm



SMS

 


Stop Engine



Vibration alarm

3 Wire connection



3.1 Terminal Description

Status	Meaning
Red	Positive(9-90v)
Black	Negative
Orange	Acc line
Yellow	Relay

3.2 Red LED light (Power Supply Status)

Status	Meaning
Slow Blink	Normal(Internal battery supply)
Long Bright	Normal(Internal battery supply)
Off	Broken or Sleeping


3.3 Yellow LED light (GSM Status)

Status	Meaning
Quick Blink	Searching GSM Signal
Slow Blink	Normal Working
Off	GSM Searching Failed or Sleeping

3.4 Blue LED light (GPS Status)

Status	Meaning
Quick Blink	Searching GPS Signal
Slow Blink	Normal Working
Off	GPS Searching Failed or Sleeping

 4 Installation

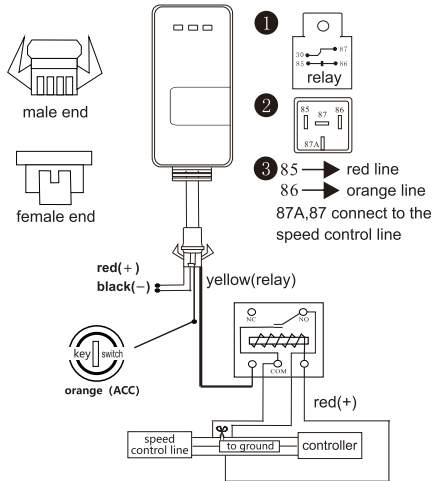

- 1 Red line connect battery positive pole(+) black line connect battery negative pole(-).
- 2 Orange line connect ACC line.
- 3 Wiring for Cut-off oil function:
 1. Find the 'Speed control line'.
 2. Detect the voltage of 'Speed control line' by a millimeter.
 3. Cut the 'Speed control line' into two lines.
 4. Connect "Speed control lines" with relay's two green lines.

Note:

1. Please use correct relay, normally, car suit 12V relay, truck suit for 24V relay..
2. Open SIM card cover, insert SIM card and turn on battery supply.
3. SIM card must have GPRS data and SMS service.
4. Please make sure LED lights up and no steel matter covering the device.
5. Please fix it by cable ties or tape.

 
5 Installation

Insert SIM Card



Noted

SIM card needs SMS,data service and phone call functions

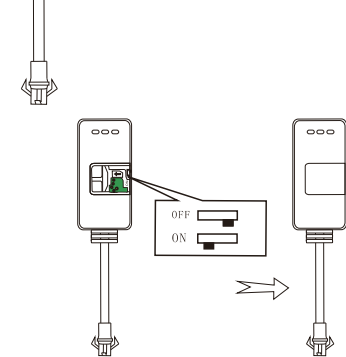


6 Product Installation

Please find someguys who are experience in GPS tracker installation

Installation Precautions :

 1. Device should be Installed in somewhere waterproof and easy be hidden.
2. Please turn on the device battery switch before use it.
3. Ensure device light in the front and there is no shield before install
4. Secure with a cable tie or sponge double-sided tape

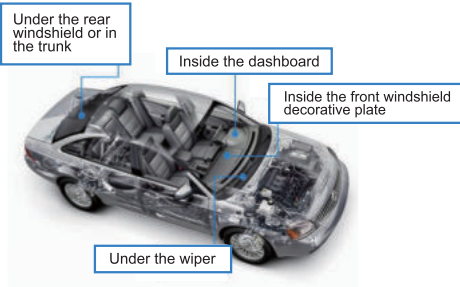

7 Precautions

GPS Tracker should be installed covertly, please contact the supplier for professional installation advice.

1. Hidden installation, avoid water.
2. Ensure the Led side facing sky and no metal cover.
3. Use cable or 3m tape to fix the device.

8 Working Description

- 1 After connected with vehicle battery, device will be turned on automatically and power indicator light (red) will be long bright.
- 2 If the device is using its own back up battery, the power indicator light (red) will slowly blink after turned on manually.
- 3 GSM signal light (yellow) and GPS signal light(blue) start fast blinking.
- 4 A few seconds later both GSM light and GPS light will be steady and start slow blinking; device enters into normal working status.

9 Trouble Shooting

Problem	Description	Solution
Failed to connect the internet	SIM card not installed	Check the sim card
	Simcard not installed properly	Install again
	No GSM network	Move the device in gsm network area
Location failed	Weak GSM network	Move the device in strong GSM network area
	SIM card has no gprs functions	Contact Sim card supplier to activate the gprs function
No GPS location	Always reply "failed to get location"	Contact the supplier
	Some poor signal areas like basement, tunnels are not able to acquire GPS signals.	Move the device to open sky areas.

10 Access to Platform

 
Platform(pictorgps.com)

There are two methods to login in the platform or app.

1. Login by IMEI number(the 15 digits in the back of the device), password: the last 6 digits of imei number.
2. Contact the supplier to create an account for you.


जीपीएस ट्रैकर

उपयोगकर्ता मैनुअल
PT06



कृपया स्थापना अनुदेश मैनुअल पढ़ें
स्थापना और उपयोग करने से पहले सावधानीपूर्वक

 1 उपस्थिति

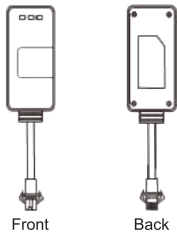

2 उत्पाद सुविधाएँ



एसीसी खोज



विचोफेस



कम बिजली अलार्म



तार काटने अलार्म



ट्रेस प्लेबैक



वास्तविक नज़र रखना



भू-रक्षा



ओवरसीड अलार्म



विस्थापन अलार्म



एस म एस

 


इंजन बंद



केपन अलार्म

3 तार कनेक्शन



3.1 टर्मिनल विवरण

ओहदा	मतलब
लाल	सकारात्मक (9-30V)
काला	नकारात्मक
नारंगी	एसीसी लाइन
पीला	रिले

3.2 लाल एलईडी लाइट (बिजली की आपूर्ति की स्थिति)

ओहदा	मतलब
धीमी झपकी	सामान्य (आंतरिक बैटरी की आपूर्ति)
लंबे समय तक उज्ज्वल	सामान्य (आंतरिक बैटरी की आपूर्ति)
बंद	टूटी हुई या नई


3.3 पीला एलईडी प्रकाश (जीएसएम स्थिति)

ओहदा	मतलब
त्वरित पलक	जीएसएम सिग्नल खोज
धीमी झपकी	सामान्य कार्य
बंद	GSM खोज विफल या स्लीपिंग

3.4 ब्लू एलईडी लाइट (जीपीएस स्थिति)

ओहदा	मतलब
त्वरित पलक	जीपीएस सिग्नल खोज
धीमी झपकी	सामान्य कार्य
बंद	जीपीएस खोज विफल या नई

 4 संस्थापन

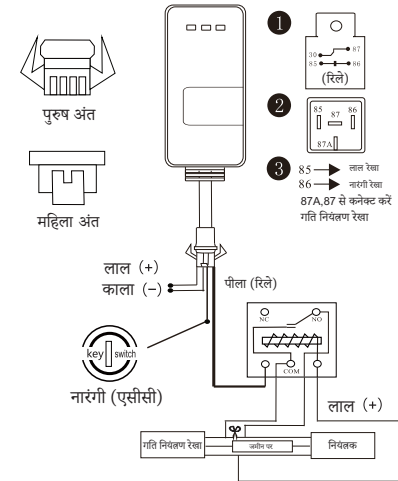

1 लाल रेखा कनेक्ट बैटरी सकारात्मक ध्रुव (+) काली रेखा कनेक्ट बैटरी नकारात्मक ध्रुव (-)

2 नारंगी लाइन एसीसी लाइन कनेक्ट करें।

3 कट-ऑफ ऑफ फंक्शन के लिए राइटिंग

- 'गति नियंत्रण रेखा' का पता लगाएं.
- एक मिलीमीटर द्वारा 'गति नियंत्रण रेखा' के वोल्टेज का पता लगाएं।
- दो लाइनों में 'गति नियंत्रण रेखा' काटें.
- रिले के दो हरी लाइनों के साथ "गति नियंत्रण लाइनों" कनेक्ट करें.

नोट:

- सही रिले का उपयोग करें, सामान्य रूप से, कार सूट 12V रिले,

24V रिले के लिए ट्रक सूट..

- ओपन सिम कार्ड कवर, सिम कार्ड डालें और बैटरी चालू करें

आपूर्ति।

 
- सिम कार्ड GPRS डेटा और एसएमएस सेवा होना चाहिए.

- कृपया सुनिश्चित करें कि एलईडी रोशनी ऊपर और कोई इश्यात बात नहीं है

डिवाइस को कवर करें।

- कृपया इसे केवल संबंधों या टेप द्वारा ठीक करें।

5 संस्थापन

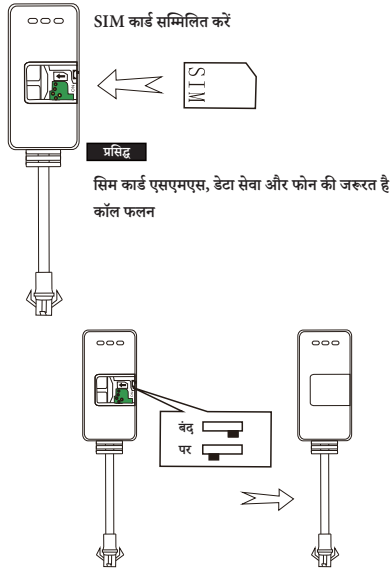

6 उत्पाद स्थापना

जीपीएस ट्रैकर स्थापना में अनुभव कर रहे हैं जो कुछ लोग मिल कृपया

स्थापना सावधानियाँ

 
* यदि आप नहीं जानते कि इसे वाहन में कैसे स्थापित किया जाता है।

तो आप किसी अनुभवी इंस्टॉलर की सहायता लें।

* डिवाइस ऐसी जगह स्थापित होना चाहिए जहाँ यह छिपा और सुरक्षा रहे।

* डिवाइस स्थापित करने से पहले सुनिश्चित करें की सकेतक रोशनी के ऊपर कुछ डब्बा ना हो।

* इसे केवल लाई या डबल टेप के साथ सुरक्षित करें।

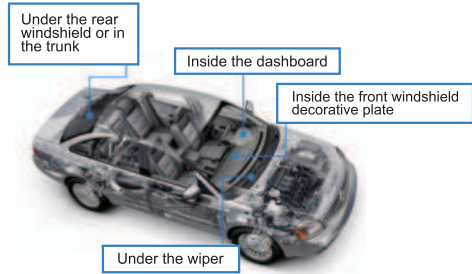

7 सावधानियों

विभिन्न प्रकार के वाहनों के लिए विभिन्न वोल्टेज के साथ रिले का उपयोग करें।

* सिम कार्ड कवर ओपन करें और सिम लगाएं और बैटरी के साथ जोड़ें।

* सिम कार्ड में GPRS और SMS सेवाएं चालू होनी चाहिए।

* ध्यान दें की सभी लाइट चालू होनी चाहिए और वहाँ कोई धातू नाहो।

* कृपया DEVISE को केवल टाई या टेप द्वारा FIX करें।

8 कार्य विवरण

- वाहन की बैटरी से कनेक्ट होने के बाद, डिवाइस चालू हो जाएगा स्वचालित रूप से और शक्ति संकेतक प्रकाश (लाल) लंबे समय तक उज्ज्वल हो जाएगा।
- यदि डिवाइस अपनी खुद की बैक अप बैटरी का उपयोग कर रहा है, तो शक्ति संकेतक प्रकाश (लाल) धीरे-धीरे मैनुअल रूप से चालू होने के बाद झपकी लेगा।
- जीएसएम सिग्नल लाइट (पीला) और जीपीएस सिग्नल लाइट (नीला) तेजी से शुरू होता है निमिष।
- कुछ सेकंड बाद दोनों जीएसएम प्रकाश और जीपीएस प्रकाश हो जाएगा स्थिर और धीमी गति से झपकी लेना शुरू करें; उपकरण सामान्य में प्रवेश करता है काम करने की स्थिति।

9 शूटिंग में परेशानी

समस्या	वर्णन	घोल
करने में विफल कनेक्ट करना इंटरनेट	सिम कार्ड नहीं स्थापित	सिम कार्ड ठीक
	सिम कार्ड नहीं ठीक से स्थापित	पुनः स्थापित करें
	जीपीएस नेटवर्क नहीं	जीएसएममें डिवाइस ले जाएं जालक्रम क्षेत्र
	कमजोर जीएसएम नेटवर्क	डिवाइस को मजबूत में ले जाएं जीएसएम नेटवर्क क्षेत्र
स्थान असफल	सिम कार्ड में कोई नहीं है जीपीआरएस फ्रैक्शन	संपर्क सिम सक्रिय करने के लिए कार्ड सत्यापन जीपीआरएस फ्रैक्शन
	इमेया जवाब दें "स्थान प्राप्त करने में विफल रहा"	सत्यापन से संपर्क करें
कोई जीपीएस नहीं स्थान	कुछ खराब सेक्टर दृष्टिकोण जैसे क्षेत्र घुंरी नहीं कर या रही है जीपीएस सेक्टरों का अभिमुखता	डिवाइस को इसमें ले जाएं खुले आकाश क्षेत्र

10 प्लेटफ़ॉर्म तक पहुँच

- प्लेटफ़ॉर्म (www.pictorgps.com)
- एंड्रॉयड और आईओएस एप्लिकेशन (एप्लिकेशन डाउनलोड करने के लिए क्यूआर कोड स्कैन करें)



प्लेटफ़ॉर्म या ऐप में लॉगिन करने के दो तरीके हैं।

- IMEI नंबर द्वारा लॉगिन करें (डिवाइस के पीछे 15 अंक) पासवर्ड: IMEI संख्या के अंतिम 6 अंक.
- आप के लिए एक खाता बनाने के लिए आपूर्तिकर्ता से संपर्क करें।