

Please read the installation instruction manual

carefully before installation and use.

1 Product Features



8

Trace



 
Tracking




















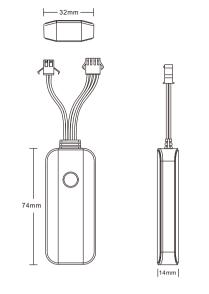

2 Product Size

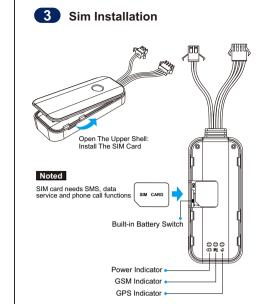

Wire Connection

 

4.1 Terminal Description

Status	Meaning
Red	Positive(9-90v)
Black	Negative
Orange	ACC line
Yellow	Relay
Green	Door
Blue	AC

4.2 Red LED Light (Power Supply Status)


Meaning	
Normal(internal battery supply)	
Normal(internal battery supply)	
Broken or sleeping	

4.3 Yellow LED Light (GSM Status)

Status	Meaning
Quick Blink	Searching GSM signal
Slow Blink	Normal working
Off	GSM searching failed or sleeping

4.4 Blue LED Light (GPS Status)

Status	Meaning
Quick Blink	Searching GPS signal
Slow Blink	Normal working
Off	GPS searching failed or sleeping

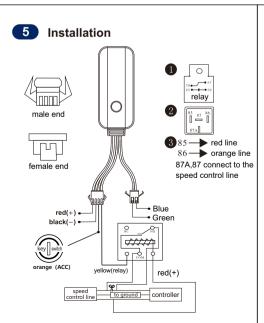

1 Red line connects battery positive pole(+) black line connects battery negative pole(-).


- 2 Orange line connects ACC line.
- 3 Wring for cut-off oil function:
- 1. Find the 'Speed control line'.
 - 2. Detect the voltage of 'Speed control line' by a millimeter.
 - 3. Cut the 'Speed control line' into two lines.
 - 4. Connect 'Speed control lines' with relay's two green lines.

- 1. Please use correct relay, normally, car suit 12V relay, truck suit for 24V relay.
- 2. Open SIM card cover, insert SIM card and turn on battery
- 3. SIM card must have GPRS data and SMS service.
- 4. Please make sure LED lights up and no steel matter covering the device.
- 5. Please fix it by cable ties or tape.

6 Product Installation

Please find someone who are experienced in GPS tracker installation

- 1. Device should be installed in somewhere waterproof and easy
- 2. Please turn on the device battery switch before using it.
- 3. Ensure device light in the front and there is no shield before install.
- 4. Secure with a cable tie or sponge double-sided tape.

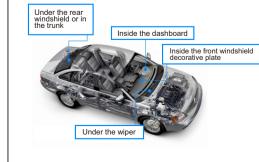

7 Precautions

GPS Tracker should be installed covertly, please contact the supplier for professional installation advice.

- 1. Hidden installation, avoid water.
- 2. Ensure the LED side facing sky and no metal cover.
- 3. Use cable or 3m tape to fix the device.

8 Working Description

- After connected with vehicle battery, device will be turned on automatically and power indicator light (red) will be long bright.
- 2 If the device is using its own back up battery, the power indicator light (red) will slowly blink after turned on manually.
- 3 GSM signal light (yellow) and GPS signal light(blue) start fast
- 4 A few seconds later both GSM light and GPS light will be steady and start slow blinking; device enters into normal

9 Trouble Shooting

connect the

Location failed

No GPS location

Description

SIM card not installed

Sim card not installed properly

No GSM network

Weak GSM network

SIM card has no gprs functions

Always reply

ailed to get locatio

Some poor signal

areas like basement, tunnels are not able to acquire GPS signals.

Solution

Check the sim card

Install again

Move the device in gsm network area

Move the device in strong GSM network area

Contact Sim ard supplier to activate the gprs function

Contact the supplier

Move the device to

1. Platform(www.wanwaygps.com)

10 Access to Platform

2. Android and IOS APP(Scan the qr code to download app)



There are two methods to login in the platform or app.

- 1. Login by IMEI number(the 15 digits in the back of the device), password: the last 6 digits of imei number.
- 2. Contact the supplier to create an account for you.