

A2 4K 2K User Manual

HD Dash Cam

Smartphone wireless WIFI version

User Manual

1

1. Packing list.....03
2. Install the Mobile APP.....03
3. Function Description of the Recorder Main Interface.....05
4. Button Operation Guide.....07
5. Schematic Diagram for Installing ACC Hardwire Kit.....11
6. Common Problems and Solutions.....12
7. Product Specification.....13

2

Packing list

Dash Cam	Rear Camera	5.5M Dash Cam Power Cable
3.5M Dash Cam Power Cable	Product User Manual	

Install the Mobile APP

1. Install the APP. Use your mobile phone to scan the QR code below to download and install the "GoLook" application.

GoLook

3

[Note] Since the APP will be updated and upgraded regularly, the actual interface and operations may be slightly different from the description in the manual. Please refer to the latest operation instructions in the APP.

Initial Setup [Add Device] Mobile Phone Operation

4

1. When the recorder is turned on, the WIFI function will be automatically activated. After waiting for five minutes without any operation, the WIFI function will be automatically turned off. At this point, click any key to activate the WIFI function again.
2. In the phone system settings, turn on "Wireless LAN". Then open the "GoLook".
3. After opening the APP, click the "Add Device" icon on the homepage.
4. Select your recorder's Wi-Fi name "HiSDvr-xxxxxx" in the device list (the initial name is the default name of the device). The APP will automatically prompt you to jump to the system WIFI settings (return to the App after the connection is successful).

Function Description of the Recorder Main Interface

5

- [3] Camera Information: Displays the front/rear camera currently in use.
- [4] Recording Status: Displays whether the video is currently being recorded.
- [5] Real-time Network Speed: Can be turned on in the APP settings.
- [6] Time Watermark: You can turn on the display in the recorder settings.
- [7] Full Screen Mode: Click to switch to full screen display.
- [8] Camera Switch: Click the icon to switch the front/rear camera.
- [9] Video Playback: Click to view, download or delete the recorded video.
- [10] Photo Function: Click to take a photo of the current screen.
- [11] Recorder Settings: Click to enter device parameter settings.

Home Page Function Description

6

connection will be established directly, if not, the App will automatically prompt you to jump to the system WIFI settings (return to the App after the connection is successful).

[4] Settings: Click to enter the application settings.

[5] Downloaded: View and manage downloaded videos and pictures.

Button Operation Guide

① [M key]: Short press to enter the menu interface. Short press again to return to the previous interface. Entering the menu interface and then exiting will automatically start recording.

② [Left button]: Short press to turn off/on recording.

③ [Right button]: Short press to switch camera angles (front/rear).

④ [Power button]: Short press to stop recording. Long press to shut down.

[Menu] Interface:

7

[Left/right button]: Switch options.

[Power button]: Confirming.

[M key]: Short press to return to the previous interface.

[DVR Settings] Interface:

[Left/right button]: Switch options.

[Power button]: Confirming.

[M key]: Short press to return to the previous interface.

[File Explorer] Interface:

8

[M key]: Short press to return to the previous interface.

[Left/right button]: Select the file to open.

[Power button]: Confirm after selecting.

②/2/4

ITEM	VIDEO_LOCK	IMAGE
VIDEO_F		
	2025-05-15_14_00_01_f.ts	
	2025-05-15_14_00_02_f.ts	
	2025-05-15_14_00_03_f.ts	

[M key]: Short press to switch [Video File] / [Lock Video File] / [Image]. Long press to return to the previous interface.

[Left/right button]: Switch options. [Right button] Long press 2S to delete the file or lock the file. Short press to return to the previous interface.

[Power button]: Confirm after selecting. Check the selected files. Short press to pause the video, and short press again to start.

③/3/4

ITEM	VIDEO	IMAGE
VIDEO_F		
	2025-05-15_14_00_01_f.ts	
	2025-05-15_14_00_02_f.ts	
	2025-05-15_14_00_03_f.ts	
	2025-05-15_14_00_04_f.ts	

9

[M key]: Short press to return to the previous interface.

[Left/right button]: Switch selection. [Right button] Long press 2S to delete the file or unlock the file.

[Power button]: Confirm after selecting. Check the selected files. Short press to pause the video, and short press again to start.

③/4/4

ITEM	VIDEO	VIDEO_LOCK	IMAGE
Front			
	2025-09-03_13_33_46_f.jpg		
	2024-03-01_00_10_28_f.jpg		
	2024-03-01_00_10_26_f.jpg		
	2024-03-01_00_01_27_f.jpg		

[M key]: Short press to return to the previous interface.

[Left/right button]: Switch selection. [Right button] Long press 2S to delete the image.

[Power button]: Confirm after selecting. Check the selected image.

[System Settings] Interface

10

[Left/right button]: Switch options.

[Power button]: Confirm after selecting.

[M key]: Short press to return to the previous interface.

Schematic Diagram for Installing ACC Hardwire Kit

Note: Must be USB type c hard cable kit, 12V-24V to DC 5V 3A car charger power cord. Most of the ACC hardwired covers sold on the market are universal and compatible with the equipment.

11

Common Problems and Solutions

Scenario	Fault phenomenon	Cause and Solution
CONSUMER connection process	Video blurring	1) Confirm that the lens protector has not been removed. 2) The front windshield of the car has a reflective effect. Please fine-tune the angle of the camera lens according to the camera's installation position.
	Wrong recording time	The light transmittance of commonly used wind shield insulation films ranges from 60% to 80%, which will affect the video recording effect during the day and at night.
	External storage device not found	The power cable included with this dash cam can only be used for charging, and cannot be used to transfer data to a computer. Please use other USB data transfer cables.
Wi-Fi connection process	The phone cannot connect to the recorder	1) Confirm whether the mobile phone Wi-Fi is turned on (if you are an iOS user, you need to select the Wi-Fi network connected to the driving recorder in the Wi-Fi item of the mobile phone's "Settings"). 2) Force close the APP and reopen the APP.
	The recorded video cannot be played on the phone	It may be related to the player or the phone system. It is recommended to use a computer to read the memory card and play the video.
Video recording process	Connection waiting time is too long	If there are too many Wi-Fi signals in the surrounding environment, the connection may fail due to interference between signals. It is recommended to use the recorder in an environment with less interference. The phone may be in a busy state. It is recommended to close other applications or restart the phone.
	Forgotten APP connection password	Enter the recorder setting interface, select restore factory settings, reset the window code and connect.
Video recording process	Recording stopped abnormally	1) Press and hold the power button for 5 seconds to force the recorder to shut down and restart it. 2) The machine cannot start when it is not connected to the power supply. Press and hold the power button for 5 seconds to force the recorder to shut down, and press the power button again to restart it.
	Black screen	Format the memory card.
	The video has no sound	1) Whether it is in silent mode (whether the silent icon is displayed in the upper right corner of the screen). 2) Format the memory card.

12

Product Specification

	Specification
Hardware	Processor: EXYNOS 5430 2.0c alloy body OS: Android 9.0 Camera specifications: GC4653 CMOS 400W Expansion card: Supports TF cards (MicroSD cards) and supports up to 512GB Collision sensor: Three-axis accelerometer Physical buttons: Power supply, lock, photo Speaker: Built-in microphone (speaker single channel) Battery type: Built-in battery (optional) Microphone: MIC Touch: No
LCD screen	Screen size: 3.18 inch Screen resolution: 640*480
Language	Traditional Chinese, Simplified English, Japanese, and other languages from multiple countries.
Start time	5S
Front recording resolution	2560*1440(30fps)
Rear recording resolution	1080P
Photo resolution	2560*1440(30fps)
Encoding type	H.264
Video recording format	MPEG4
Photo format	JPG
Parking monitoring	Support
Loop recording	1 minute, 3 minutes, 5 minutes
REC CAMERA	GC208320000/1600*1200
Voice control	No
Document locking	Support
Reverse view	No
Screen brightness adjustment	No
Time lapse recording	Support, 24-hour parking monitoring, frame by frame per second
Screen saver	YES
Rear view interface	YES
Interface	TYPE-C, ACC
Working voltage	DC5V 3A
Working current	<100mA
Static current	2ma
Working temperature	-30°~70°()
Storage temperature	-30°~75°()
Bracket	Hidden bracket
Parts	Voltage reduction line, TYPE-C, ACC cable, Inset 12V-24V, Output 5V
Instructions	Paper instruction manual

14

Guarantee

User Files

User Name	Sex	Age
Address		
Telephone		Zip
Purchase Site		
Purchase Price	Sales Single Number	
Commodity ACC Specifications	Footage Numbers	
Dealers Signature	The User Signature	

Guarantee clause

1. 1 year open date of purchase.
2. Guarantee service is subject to normally using.
3. All of damage by man-made (tear open the housing, tear off the sticker, abnormal usage), or losing this card, we will not guarantee.

15