

PS22 SMS Command			
No.		SMS command	Description
1		Speed123456 080	Turn on overspeed SMS notification, set the speed limit up to 80 km / h, 000 means closing the device
2		CQ	The device will be reset
3		IP WW9808.gpsog.com 9808	SMS command: IP+blank space+IP address+PORT number Set server IP and PORT
4		CXZT	Check the status Reply: device software version, ID, IP, electric quantity etc
5		FREQ,123456,30	ACC ON: upload interval 30 means 30 seconds
6		STATIC,123456,40	ACC OFF: upload interval 40 means 40 seconds
7	Setting APN (with use and psssword)	Apn,123456,Apn name,user,password#	Set APN,USER and passwrod(8numbers)
8	Setting APN (without use and psssword)	Apn,123456,Apn name,,#	
9	Open wifi	WIFI,123456,wifi name,wifi password,ON#	Set wifi,name and password(8numbers)
10	Close wifi	WIFI,123456,wifi name,wifi password,OFF#	
11	Open OBD	OBD 1	
12	Close OBD	OBD 0	