


GPS Tracker

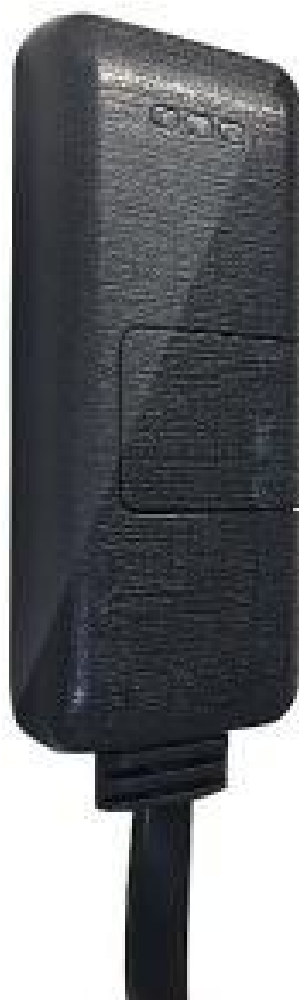







Instruction

PT06



Please view this manual carefully to make sure correct installation and use.

01/ Product Features

 ACC Detect	 Geo-safe	 Low-power Alarm
 Trace Playback	 Tracking	 Over-speed Alarm
 Stop Engine	 SMS Alarm	 Movement Alarm
 Cut-wire Alarm	 Geo-defense	 Vibration Alarm

02/ TerminalDescription

2.1 Wiring instruction

Color	Wiring	
Red	Positive (9-90V)	
Black	Negative	
Orange	ACC line	
Yellow	Relay	

2.2 Red LED light (Power Supply Status)

Status	Meaning
Slow Blink	Normal (Internal Battery Supply)
Light	Normal(External Power Supply)
Off	Broken or Sleeping


2.3 Yellow LED light (GSM Status)

Status	Meaning
Quick Blink	Searching GSM Signal
Slow Blink	Normal Working
Off	GSM Searching Failed or Sleeping

2.4 Blue LED light (GPS Status)

Status	Meaning
Quick Blink	Searching GPS Signal
Slow Blink	Normal Working
Off	GPS Searching Failed or Sleeping

03/ Installation

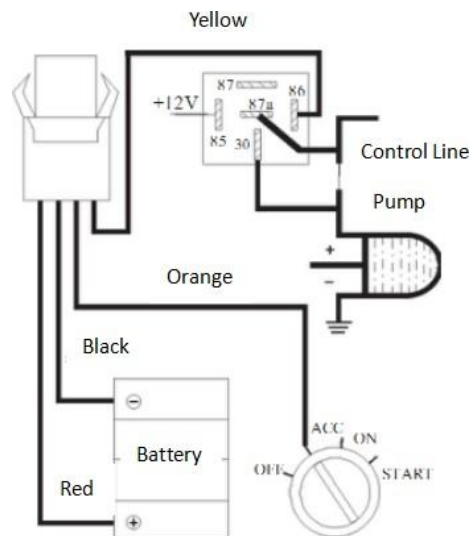

3.1 Red line connect battery positive pole(+),black line connect battery negative pole(-).

3.2 Orange line connect ACC line.

3.3 Wring for Cut-off oil function:

(1) Find the "Speed control line".

(2) Detect the voltage of "Speed control line" by a multimeter.

(3) Cut the "Speed control line" into two lines.

(4) Connect "Speed control lines" with relay's two green line.

Note:

- 1).Please use appropriate relay, normally electric bike suit 5V relay, car suit 12V relay.
- 2).Open SIM card cover, insert SIM card and turn on battery supply.
- 3).SIM card must have GPRS data and SMS service.
- 4).Please Turn on battery supply.
- 5).Please make sure LED lights up and no steel matter covering the device.
- 6).Please fix it by cable ties or tape.

04/ Start to Use

4.1 Log in Tracking Platform

Please log in_

<http://www.gwgps12580.com/>

Default username : IEMI number

Password : 123456

4.2 Download

Please download CarHere APP



4.3 SMS Command

(1). StatusChecking

[status#](#)

(2). Setting SOSNumber

[sos,a,mobile number#](#)

(3). Setting CenterNumber

[center,a,mobile number#](#)

Note: Please ask the seller for admin account if needed.

05/ Working Description

5.1 The device will start automatically when connected with external power, Red LED will be light.

5.2 When there is no external power, Red LED will be blink slowly.

5.3 Yellow LED(GSM) and blue LED(GPS) will blink quickly when searching signal.

5.4 When device is working normally, Yellow LED(GSM) and blue LED(GPS) will blink slowly.

06/ Battery use safety

6.1 Please don't make battery short circuit.

6.2 Please bend or open battery.

6.3 Please don't put battery into water or fire.

07/ Trouble Shooting

If the device not working normally, please refer to the following sheet. If problem cannot be solved, please contact device seller.

Common Problem	Cause	Solution
Bad signal	Device is used in regions with poor telecom signal, such as tall building or basement.	Use it in regions with good telecom signal
Network connection failed	SIM card not installed correctly	Check SIM card
	SIM card is dirt	Clear the SIM card
	No GSM signal	Go to area covered with GSM signal
	Weak signal	Go to area with strong signal
Cannot check location	SIM card has no GPRS function	Please top up GPRS function
	Location acquisition failed	Contact with the seller