


GPS TRACKER


USER MANUAL

PT06



Please read the installation instruction manual carefully before installation and use.

1 Appearance

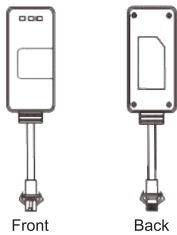

2 Product Features



ACC detection



Geo-safe



Low battery



Cut-wire Alarm



Trace Playback



Tracking



Geo-defense



Over-speed alarm



Displacement alarm



SMS




Stop Engine



Vibration alarm

3 Wire connection



3.1 Terminal Description

Status	Meaning
Red	Positive(9-90v)
Black	Negative
Orange	Acc line
Yellow	Relay

3.2 Red LED light (Power Supply Status)

Status	Meaning
Slow Blink	Normal(Internal battery supply)
Long Bright	Normal(Internal battery supply)
Off	Broken or Sleeping


3.3 Yellow LED light (GSM Status)

Status	Meaning
Quick Blink	Searching GSM Signal
Slow Blink	Normal Working
Off	GSM Searching Failed or Sleeping

3.4 Blue LED light (GPS Status)

Status	Meaning
Quick Blink	Searching GPS Signal
Slow Blink	Normal Working
Off	GPS Searching Failed or Sleeping

4 Installation

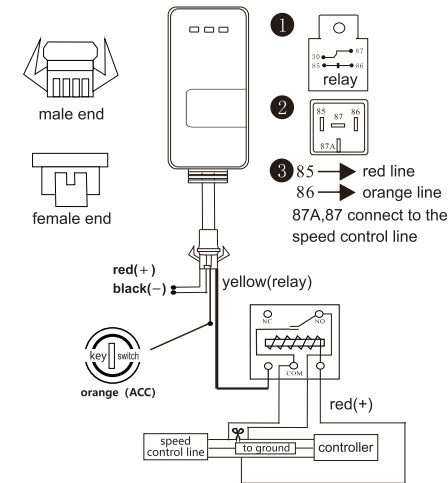


- 1 Red line connect battery positive pole(+) black line connect battery negative pole(-).
- 2 Orange line connect ACC line.
- 3 Wring for Cut-off oil function:
 1. Find the 'Speed control line'.
 2. Detect the voltage of 'Speed control line' by a millimeter.
 3. Cut the 'Speed control line' into two lines.
 4. Connect "Speed control lines" with relay's two green lines.

Note:

1. Please use correct relay, normally, car suit 12V relay, truck suit for 24V relay..
2. Open SIM card cover, insert SIM card and turn on battery supply.
3. SIM card must have GPRS data and SMS service.
4. Please make sure LED lights up and no steel matter covering the device.
5. Please fix it by cable ties or tape.

5 Installation

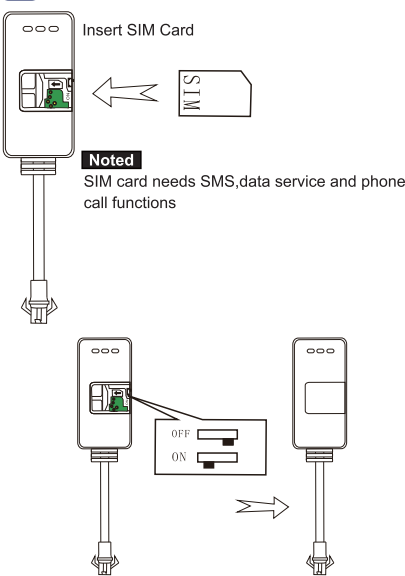


6 Product Installation

Please find someguys who are experience in GPS tracker installation

Installation Precautions :

1. Device should be Installed in somewhere waterproof and easy be hidden.
2. Please turn on the device battery switch before use it.
3. Ensure device light in the front and there is no shield before install
4. Secure with a cable tie or sponge double-sided tape

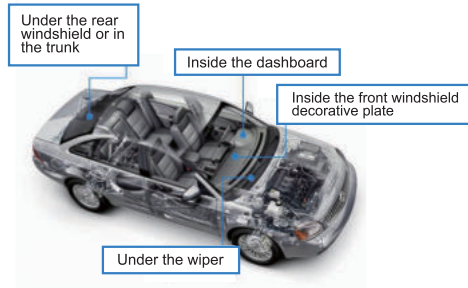

7 Precautions

GPS Tracker should be installed covertly, please contact the supplier for professional installation advice.

1. Hidden installation, avoid water.
2. Ensure the Led side facing sky and no metal cover.
3. Use cable or 3m tape to fix the device.

8 Working Description

- 1 After connected with vehicle battery, device will be turned on automatically and power indicator light (red) will be long bright.
- 2 If the device is using its own back up battery, the power indicator light (red) will slowly blink after turned on manually.
- 3 GSM signal light (yellow) and GPS signal light(blue) start fast blinking.
- 4 A few seconds later both GSM light and GPS light will be steady and start slow blinking; device enters into normal working status.

9 Trouble Shooting

Problem	Description	Solution
Failed to connect the internet	SIM card not installed	Check the sim card
	Simcard not installed properly	Install again
	No GSM network	Move the device in gsm network area
	Weak GSM network	Move the device in strong GSM network area
Location failed	SIM card has no gprs functions	Contact Sim card supplier to activate the gprs function
	Always reply "failed to get location"	Contact the supplier
No GPS location	Some poor signal areas like basement, tunnels are not able to acquire GPS signals.	Move the device to open sky areas.


10 Access to Platform

Platform(pictorgps.com)

There are two methods to login in the platform or app.

1. Login by IMEI number(the 15 digits in the back of the device), password: the last 6 digits of imei number.
2. Contact the supplier to create an account for you.

उपयोगकर्ता मैनुअल
PT06



Front

Back

एप्लीसी योज	जिरोफेस	कम बिजली अलम	तार काटने अलम
ट्रेड पेवैक	पारस्विक नजर रतना	पू-रखा	ओवरस्टीड अलम
विद्यमान अलम	एस म एस	इन्ज बंद	कम अलम

ओह्मदा	मतलब
लाल	सकारात्मक (9-90V)
काला	नकारात्मक
नारंगी	एसीसी लाइन
पीला	रिले

ओहदा	मतलब
धीमी झपकी	सामान्य (आंतरिक बैटरी की आपूर्ति)
लंबे समय तक उज्ज्वल	सामान्य (आंतरिक बैटरी की आपूर्ति)
बंद	टूटी हुई या नौंद

ओहदा	मतलब
त्वरित पलक	जीएसएम सिग्नल खोज
धीमी झपकी	सामान्य कार्य
बंद	GSM खोज विफल या स्लीपिंग

ओहदा	मतलब
त्वरित पलक	जीपीएस सिग्नल खोज
धीमी झपकी	सामान्य कार्य
बंद	जीपीएस खोज विफल या नींद


- नोट:
1. सही रिले का उपयोग करें, सामान्य रूप से, कार सूट 12 V रिले, 24V रिले के लिए ट्रक सूट..
 2. ओपन सिम कार्ड कवर, सिम कार्ड डालें और बैटरी चालू करें आपूर्ति।
 3. सिम कार्ड GPRS डेटा और एसएमएस सेवा होना चाहिए।
 4. कृपया सुनिश्चित करें कि प्लगईडी रोशनी ऊपर और कोई इस्पात बात नहीं है डिवाइस को कवर करें।
 5. कृपया इसे केवल संबंधों या टेप द्वारा ठीक करें।

Diagram illustrating the correct orientation for inserting a SIM card into a mobile phone. The top part shows the SIM card being inserted into the slot with the gold contacts facing down. The bottom part shows the SIM card being inserted with the gold contacts facing up, which is incorrect. A callout box points to the gold contacts with the text 'बंद पर' (Band on), indicating that the contacts should not be facing up.

जीपीएस ट्रैकर स्थापना में अनुभव कर रहे हैं जो कुछ लोग मिल कृपया

स्थापना साधनार्थियाँ

- * यदि आप नहीं जानते कि इसे वाहन में कैसे स्थापित किया जाता है ।
- तो आप किसी अनुभवी इंस्टॉलर की सहायता लें ।
- * डिवाइस ऐसी जगह स्थापित होना चाहिए जहाँ यह स्थिर और सुरक्षित रहे ।
- * डिवाइस स्थापित करने से पहले सुनिश्चित करें की सकेतक रोशनी के ऊपर कुछ ढक्का ना हो ।
- * इसे केवल लाई वा डबल टेप के साथ सुनिश्चित करें ।

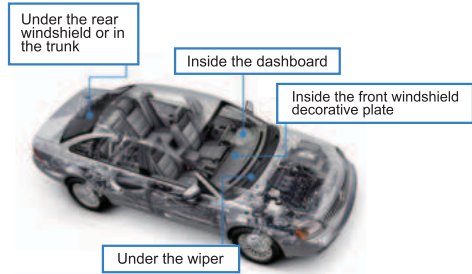

- * **सिम कार्ड** कवर ओपन करे और **सिम** लगाए और बैटरी के साथ जोड़े।
- * **सिम कार्ड** में **GPRS** और **SMS** सेवाए चालू होनी चाहिए।
- * ध्यान दे की सभी **लाइट** चालू होनी चाहिए और वहाँ कोई धातु नाहो।
- * **क्युआ** **DEVISE** को केवल **टाई** या **टेप** द्वारा **FIX** करें।

1. वाहता की बैटरी से जोनेजट होने के बाद, बिदाइस चालू हो जाएगा
स्वचालित रूप से और शक्ति संकेतक प्रकाश (लाल) लेने समय तक उज्ज्वल हो जाएगा।
2. यदि बिदाइस अपनी खुद की बैटरी का उपयोग करना कर रहा है, तो शक्ति संकेतक प्रकाश (लाल) धीरे-धीरे निम्नअध रूप से चालू होने के बाद झपकी लेगा।
3. जीएसएम सिग्नल लाइट (पीला) और जीपीएस सिग्नल लाइट (नीला)
तेजी से झुक होता है निम्न।
4. कुछ सेकंड बाद दोनों जीएसएम प्रकाश और जीपीएस प्रकाश हो जाएगा
स्थिर और धीमी गति से झपकी लेना शुरू करें, उपकरण सामान्य में प्रवेश करता है
काम करने की स्थिति।

समस्या	वर्णन	घोल
कने में विकल कनेस्ट ककन इटरनेट	सिम कर्ड नही स्थापित	सिम कर्ड हेंक
	सिम कर्ड नही ठीक से स्थापित	पुनः स्थापित करें
	जीपीएस नेटवर्क नही	जीएसएमने विवासु ले जाएँ जात्रम क्षेत्र
	कमजोर जीएसएम नेटवर्क	डिवाइस को मजबूत में ले जाएँ जीएसएम नेटवर्क क्षेत्र
स्थान असफल	सिम कार्ड में कोई नही है जीपीआरएस प्रिक्कन	सर्कस सिम सक्रिय करने के लिए कार्ड सवायर जीपीआरएस प्रिक्कन
	ह्मेरा जवाब दे "स्थान प्रायत करने में विफल रहू"	सवायर से सर्कस करें
कोई जीपीएस नही स्थान	कुछ सरबब क्सेल तकाने प्केस क्षेत्र सुरों नही कः पः रही है जीएसएम सेकेंडः कः अधिपयल	डिवाइस को इसमें ले जाएँ खुले आकाश क्षेत्र

- प्लेटफॉर्म या ऐप में लॉगिन करने के दो तरीके हैं।**
1. IMEI नंबर द्वारा लॉगिन करें (डिवाइस के पीछे 15 अंक)
पासवर्ड: IMEI संख्या के अंतिम 6 अंक.
 2. आप के लिए एक खाता बनाने के लिए आपूर्तिकर्ता से संपर्क करें।