

GL600 Smart Electronic Lock

User Guide

V2.5

Revision Date: 19/02/2023



Table of Contents

Table of Contents	2
1 Copyright and Disclaimer	3
2 Product Overview	3
3 Product Functions.....	3
4 Specifications	5
5 Standard Package and Optional Accessories	6
6 Description of Product Appearance	7
6.1 Front View	7
6.2 Bottom View.....	7
6.3 Side View	9
6.4 Back View and Back Cover Opened	10
Back View.....	10
Back Cover Opened.....	11
7 First Use.....	12
7.1 Installing a SIM card	12
7.2 Power on the TL10 device	12
7.3 LED indicators and Buzzer Description	13
LED Indicators Description	13
Buzzer Sound Description	14
7.4 Device Initialization by SMS command	
7.5 Product working Logic	15
7.6 Lock and Unlock Device	15
7.6.1 Lock the device.....	15
7.6.2 Unlock the device	15
7.6.2.1 Unlock by Password.....	15
7.6.2.2 Unlock by Authorized RFID key	15
8 Tracking the device in XXXXXX GPS Platform.....	16
8.1 Principle of communication	16
8.2 Get the login ID	16
8.3 Login Software Platform.....	16
9 Device Installation	17
10 Warranty Terms	18

1 Copyright and Disclaimer

2 Product Overview

GL600 is 2G/3G/4G Smart Electronic Lock, built-in 10400mAh battery, G-sensor and RFID reader, and monitor the container or asset's location and door status. through the wireless technology, User can open the GPS lock remotely by SMS password or (android or IOS) app. If there is no cellular network, user can also open the lock by the authorized RFID key on spot.

3 Product Functions






Hardware/ Firmware	Main Functions	Description
Hardware	2G/3G cellular network	4G customizable
	GPS+LBS Positioning	LBS info. (CELL ID and LAC)
	Dual SIM cards	It can be installed with two Micro SIM cards and supports the dual SIM single standby mode. The device will automatically select a SIM card to register the network.
	Build in 10400mAh Rechargeable 18650 lithium battery	Customizable
	Build in 3 Axis acceleration sensor	Motion or vibration detecting
	Buzzer and LED indicators reminder	Different device Status Buzzer and LED indicator reminder
	Charger	5V DC -2A charging
	Bluetooth (Optional)	Unlocking via APP or Download historical Track data through Bluetooth (replace serial port)
Firmware	Real time Position querying	Query current location by SMS command
	Unlock by Password	Unlock the device by Password (GPRS/SMS)
	Unlock device by authorized RFID key	Unlock the device by authorized RFID keys
	Locked automatically	The device will automatically lock when the lock rope is inserted
	50 authorized RFID keys	Unlock the device by authorized RFID keys
	Polygon Geo-fence	10 Polygon Geo-fences
	5 Authorized Phone Numbers	Receiving short message alert or command response and sending command
	Supports 9 alerts	Lock rope tamper, Swiping unauthorized RFID key, Unlocking, Wrong password,

		Vibration, Enter Geo-fence, Exit Geo-fence, Low battery, Back Cover Opened, Motor Fault
	Lock and Unlock Report	The way to lock or unlock, unlock by Password or RFID key, report time, locked /Unlocked successful or failed
	Wake up source	Vibration, RFID Key Reading, Back Cover Opened, Lock rope inserted and unplugging, Sleep and timing wake up (RTC)
	FOTA	Firmware upgrading via OTA

4 Specifications

Items	Description
Size	195mm x 114mm x 37mm
Weight	1000g (Include main unit and 35CM Lock rope)
Material	Engineering plastic
GPS Module	ATG6558 chipset
GSM module	Quectel 2-4G series modules
Working temperature	-20°C -- +80°C
Store temperature	-40°C -- +80°C
Humidity	5%—99%
Standard battery	Rechargeable battery 10400mAh
Average working current	<90 mA
Average current standby	<100uA
Working hour	2G device(10400mAh) normal working mode: 100 hours
	4G device(10400mAh) normal working mode: 90 hours
Waterproof	IP67
Transmission mode	Support TCP(GPRS) or SMS (short message)

5 Standard Package and Optional Accessories

Items	Figure	Standard	Optional
TL10 Main unit		•	
Lock rope		•	
RFID Keys (2 pcs)		•	
Micro USB configure cable			•
Charger Adapter (DC5V- 2A output)			•

6 Description of Product Appearance

6.1 Front View

f



- 1. Lock rope:** standard size 35 cm
- 2. Swipe RFID Key Area** Swipe RFID Key

6.2 Bottom View




1 Charger Interface 5V DC -2A Charger

2 Buzzer: Different Device Status, Buzzer reminder


6.3 Side View



1 LED indicator:

: GSM-Red led :Cellular network connection Status

: GPS-Green led: GPS fix Status

: LVS-Yellow led: Low Battery Status

: CHG-Red led: Charging or Charging full Status

6.4 Back View and Back Cover Opened

Back View



- 1 Cushioned silicone pad:** Prevent equipment damage when equipment crashes
- 2 Nameplate:** Device Brand Name, IMEI and so on.
- 3 Strong magnet:** Prevent equipment shake and collision monitoring assets

Back Cover Opened




- 1 Power switch:** Turn the switch to the left, power on the device;
Turn the switch to the right, power off the device.
- 2 Micro USB socket :** Connect Micro USB configure cable to PC, initialize parameters or debug purpose and Firmware upgrade.
- 3 SIM2 slot:** Push the SIM card holder down vertically to open it, and then put the **Micro-SIM** card 2 inside, press down then push the SIM card holder up vertically to lock the SIM card
- 4 SIM1 slot:** Push the SIM card holder down vertically to open it, and then put the **Micro-SIM** card 1 inside, press down then push the SIM card holder up vertically to lock the SIM card
- 5 Light sensor:** it's used to detect whether Back Cover opened or not.

7 First Use

7.1 Installing a SIM card

Please refer to section '[Back Cover Opened](#)', Open the Back Cover by screwdriver.

- Open the SIM1 Or SIM2 SIM card slot
- Insert the **Micro SIM card** into the card slot with its gold-plated contacts facing towards the Printed Circuit Board (PCB)



- Slide the SIM card holder to lock it in place







- Ensure that SIM card's SMS/Cellular Network service are available.
- Ensure that the phone card PIN lock has been closed properly.

7.2 Power on the TL10 device

Please refer to section '[Back Cover Opened](#)', Turn the switch to the left, power on the device. Look LED lights, If **Yellow LED** Blinking every 3 sec, It indicates low battery, Please refer to section '[6.2 Bottom View](#)' , charge the device by 5V DC adapter about 8 hours.

7.3 LED indicators and Buzzer Description

LED Indicators Description

ICON	LED Indicators	Status	Description
	RED LED GSM	Blinking very fast, 3 times in one sec	Registered GSM and connected to GPRS network, sending data to server
		Blinking every 3 sec	Registered GSM, but can't connect to GPRS network, need to check parameters setting and if SIM card was activated GPRS function
	Green LED GPS	Blinking every 10 sec	GPS positioning valid
		Blinking every 3 sec	GPS signal is invalid
		Off	The device is in sleep mode or power off
	Yellow LED Low BAT	Blinking every 3 sec	When the internal battery power is lower than 20%
	Red LED Charging	Charging or charging full	When charging, red light is always on; When charged full, red light turns green

Buzzer Sound Description

No.	Operation/condition	Buzzer sound Description
1	Swipe authorized RFID key	Buzzer ring once , indicates RFID key is read; the Motor running, and Buzzer ring twice Indicates that the lock rope can now be pulled out.
2	Inserted the lock rope properly, the device lock automatically	Buzzer ring once , indicates the device detects that both ends of the lock rope are inserted into the proper position; Motor running, Buzzer ring twice Indicates that the device locked successfully.
3	Unlocking but never unplug the lock rope	After unlocking for 10 seconds, the lock rope is not pulled out and the buzzer will continue to beep for 60 seconds ; During the buzzer ringing, if the lock rope is pulled out, the buzzer stops ringing; or after 60 seconds, the buzzer stops ringing and the device starts to lock automatically.
4	Unlock by Password	Buzzer ring 3 second continuously , after unlocking for 10 seconds, the lock rope is not pulled out and the buzzer will continue to beep for 60 seconds
5	Swipe unauthorized RFID key	Buzzer ring 3 second continuously

7.4 Product working Logic

Normally, if there is no any external wake up source, the device will go to sleep, and wake up according to RTC wake up interval (30 minutes as default value)

When swipe the RFID key, detected vibration, Back Cover Opened, lock rope inserted and unplugging, RTC timing wake up, these Wake-up source will wake up this device, when device wake up, it will work about 10 minutes, during the 10 minutes, it reports position data according to Position Data Reporting Time interval (30 sec as default value).

7.5 Lock and Unlock Device

7.5.1 Lock the device

When inserted the two ends of lock rope inside device in place, the TL10 device will lock itself automatically.

Working Process: Buzzer ring once, Motor running, Buzzer ring twice.

'**Buzzer ring once**' indicates the device detects that both ends of the lock rope are inserted into the proper position;

'**Buzzer ring twice**' Indicates that the device locked successfully.

7.5.2 Unlock the device

7.5.2.1 Unlock by Password

Send below command via short message or GPS platform

(P43,888888)

Working Process: When unlock successfully, Buzzer ring 3 second continuously, User can take out the lock rope. After unlocking for 10 seconds, the lock rope is not pulled out and the **buzzer will continue to beep for 60 seconds**; During the buzzer ringing, if the lock rope is pulled out, the buzzer stops ringing; or after 60 seconds, the buzzer stops ringing and the device starts to lock automatically.

7.5.2.2 Unlock by Authorized RFID key

Customer will get 2 authorized RFID keys in the package. When the device battery is normal, after turning on the power switch, swipe one of the authorized RFID keys to unlock.

Working Process: When unlock successfully, **Buzzer ring once**, indicates RFID key is read; the Motor running, and **Buzzer ring twice** Indicates that the lock rope can now be pulled out, and then User can take out the lock rope.


Note:

If swiped with a unauthorized RFID key, Buzzer ring 3 second continuously. and User can't take out the lock rope ,device will also trigger an alert to platform.

8 Tracking the device in TRAC4YOU GPS Platform

8.1 Principle of communication

In order to have more understanding of TL10 device, it is recommended to experience the related functions of this product on our GPS platform.

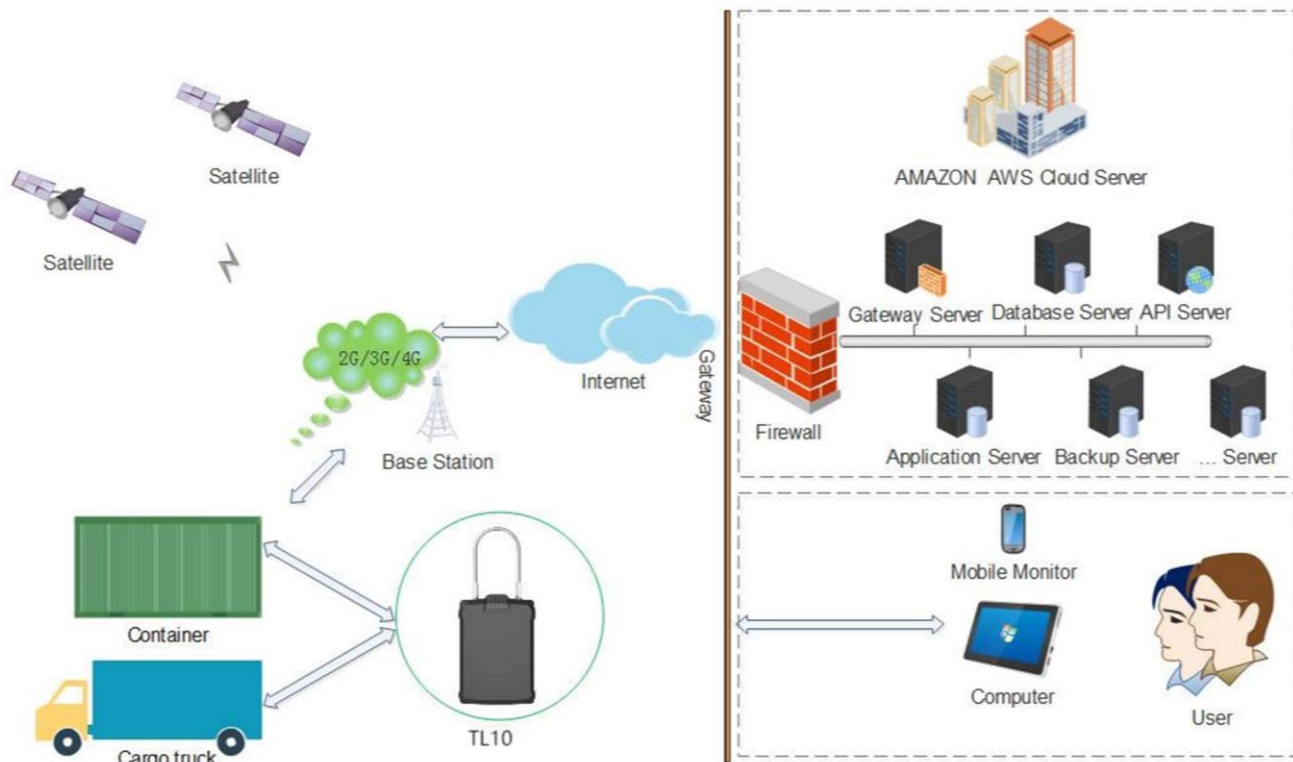

8.2 Get the login ID

Please get the Login ID of GPS tracking system from Platform providers (Trac4you sales), and monitor the device's current position and others.

8.3 Login Software Platform

Please get the Web App link / PC based software / Android/IOS App and Manuals from Trac4you sales or other Platform Providers, and manage your asset in the software Platform.

Trac4you Web App link:

<http://web.trac4you.com>

9 Device Installation

The TL10 device is easy to install, and the installer simply inserts the lock rope through the lock hole and the strong magnet behind the device will firmly cling to the case.



10 Warranty Terms

- The warranty period will be 12 months from the delivery date, the warranty shall not apply to any defect, failure or damage caused by improper use, disassembled and alteration without authorization.
- Our obligations are limited to repair of the defect or replacement the defective part or at its discretion replacement of the product itself.
- Repair or replacement under the terms of this warranty does not provide right to extension or renewal of the warranty period.
- The warranty is not applicable to cases other than defects in material, design and workmanship.